

Top

Mounting Rib

# 15" Width Shutters

Mounting Rib

Your shutters may be mounted on wood, vinyl, aluminum, brick, stone or block exteriors using easy to install mounting clips (See Illust. 1) All the necessary mounting hardware is included in your shutter package. Follow the instructions listed below:

Shutters expand and contract with normal daily temperature changes. Make sure there is at least 3/4" space for movement both above and below the shutter.

## Installation Instructions

1. Place top of template next to window at desired shutter location. Top of template locates top of shutter. (See Illust. 2)
2. Mark screw location with pencil, nail, or other sharp object by punching through mounting ribs of template at high point of siding or center of brick, stone or block on masonry applications. (See Illust. 3A & 3B) Locate screw as close to the top of the mounting rib as possible. With clapboard applications, be certain the bottom of clip does not extend past edge of clapboard.
3. Repeat steps #1 and #2 for bottom of shutter. Bottom of template locates bottom of shutter.
4. Install screws marked at locations for wood and masonry exteriors. Use the masonry anchors and screws for masonry exteriors. Use a 5/16" masonry drill bit for masonry applications. For vinyl and aluminum siding - drill a 1/4" hole through siding to allow siding to move. Using a 9/64" drill bit, drill into wall substrate. (See Illust. 4)
5. Use (4) four clips per shutter sizes up to 55". For sizes 59" through 81", two extra clips are required. They are located on the center mounting ribs.
6. For center mounting rib clips, repeat steps #1 and #2 by locating top of template below shutter by:

28" for 59" shutter  
 30" for 63" shutter  
 32" for 67" shutter  
 34" for 71" shutter  
 36" for 75" shutter  
 38" for 81" shutter

7. Position shutter with mounting ribs over mounting clips and push firmly. Each mounting rib should be secured by a clip.  
**IN ORDER FOR YOUR SHUTTERS TO PERFORM PROPERLY, ALL MOUNTING CLIPS MUST BE FREE TO MOVE VERTICALLY!**

## Important Instructions for the Care of Your New Shutters

Your new shutters have been painted with the best specially formulated acrylic paint available, in order to provide you with years of maintenance free beauty.

Paint systems, including automotive, industrial and exterior house paints, are subject to weathering.

For this reason, we would like to offer some helpful hints for keeping, and/or restoring your shutters to their best appearance.

Should the appearance become dull or dingy, most often this film can be easily removed by washing with a good dishwashing detergent (no harsh chemicals).

## Painting


Should you decide to paint your shutters, be sure to use any good exterior latex, or water-based paint. Do not use an oil based paint! Do not sand off the original paint. Merely clean and repaint.



Illust.3A



Illust.3B

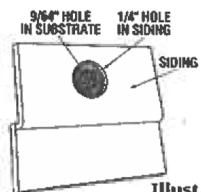

Illust.4

Mounting Rib

Bottom

Mounting Rib